

ELECTRONIC RELAY PRODUCTS, INC.

2817 Sok. No: 22
Mersinli / IZMIR
www.frikelectronic.com

Tel: +90 (232) 435 04 78 - 435 95 71
Fax: +90 (232) 461 51 13
info@frikelectronic.com


FRIK Thermostat operating manual T400

Set : The max. temperature value for the heating type thermostat.

Hys : The desired temperature difference. A change between -1/-10 for the heating type thermostat.

When the power supply is applied to the thermostat thermometer. TEH becomes displayed in the heating type device.

This symbol disappears approximately after 4 seconds and the medium temperature is displayed instead.

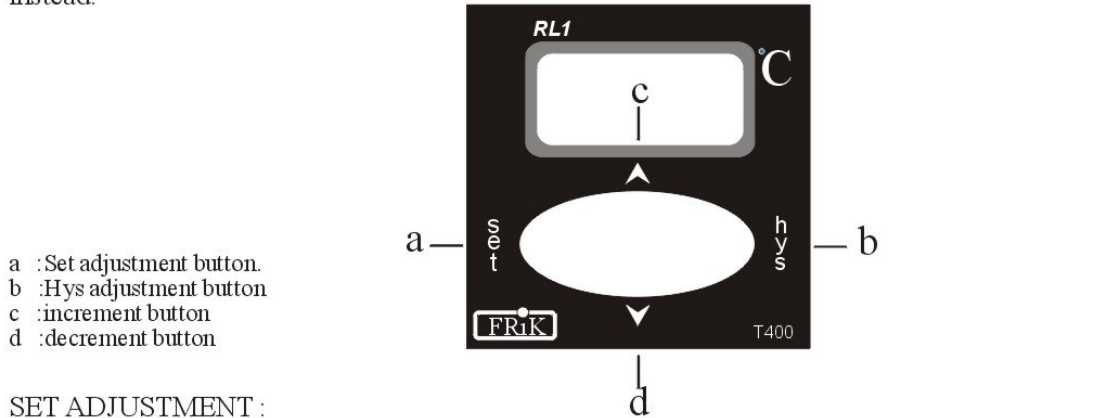

SET ADJUSTMENT :

A : Set button is pressed once. SP becomes displayed, after a particular time SP disappears and instead the last adjusted value becomes displayed.

B : The desired value is obtained by the increment and decrement buttons. The adjusted value starts to blink for a while. After this process, the value is put into the memory and we return to the temperature display.

DIFFERENTIAL ADJUSTMENT :

A : Hys button is pressed once. dt becomes displayed, after a particular time dt disappears and the last adjusted value is displayed instead..

B : The desired value is obtained by the increment and decrement buttons. The adjusted value starts to blink for a while. After this process, the value is put into the memory and we return to the temperature display.

** Voltmeter * Ammeter * Programmed Counter * Unprogrammed Counter * Tachometer
* Time Relay * Thermometer * Heat Control * Solid State Relay * Digital Timer
* Frequency meter * Optical Switch * Inductive Switch * Capacitive Switch*